

# INSTRUCTIONS



\*99TA516150\* (for RCD use only)

Instruction Sheet Number: 99TA516150

Description: Paragon Compressor Top Level Kits for (TS, TT, TU, TV) Rev 4 7/13/2015

Author: C.J.D.

Date: April 21, 2015

Part Number: 6BSA000320, 6BTA000321, 6BUA000322, 6BVA000804

**Paragon compressor kits 6BSA000320, 6BTA000321, 6BUA000322, 6BVA000804 are top level accessory kits for application with the Paragon Screw compressor models TS, TT, TU, and TV.**

**TOP LEVEL COMPRESSOR KIT: 6BSA000320 (For 06TS137, 155, 186 Compressor Models)**

<u>QTY</u>	<u>ITEM</u>	<u>Part Number</u>
1	Kit, Terminal Box	6BTA000323
1	Kit, Jam Nut M12	6BTA000318
1	TS Oil Tube Assembly	00PSN000500300A
1	Instruction Sheet	99TA516150

**TOP LEVEL COMPRESSOR KIT: 6BTA000321 (For 06TT266, 301, 356 Compressor Models)**


<u>QTY</u>	<u>ITEM</u>	<u>Part Number</u>
1	Kit, Terminal Box	6BTA000323
1	Kit, Jam Nut M12	6BTA000318
1	TT Oil Tube Assembly	00PSN000500400A
1	Instruction Sheet	99TA516150

**TOP LEVEL COMPRESSOR KIT: 6BUA000322 (For 06TU483, 554 Compressor Models)**

<u>QTY</u>	<u>ITEM</u>	<u>Part Number</u>
1	Kit, Terminal Box	6BUA000324
1	Kit, Jam Nut M12	6BTA000318 (Alt. P/N 6BUA000319 M16 Nut)
1	TU Oil Tube Assembly	00PSN000500500A
1	Instruction Sheet	99TA516150

**TOP LEVEL COMPRESSOR KIT: 6BVA000804 (For 06TV680, 753, 819 Compressor Models)**

<u>QTY</u>	<u>ITEM</u>	<u>Part Number</u>
1	Kit, Terminal Box	6BUA000324
1	Kit, Jam Nut M12	6BTA000318 (Alt. P/N 6BUA000319 M16 Nut)
1	TV Oil Tube Assembly	2BVB001046
1	Instruction Sheet	99TA516150

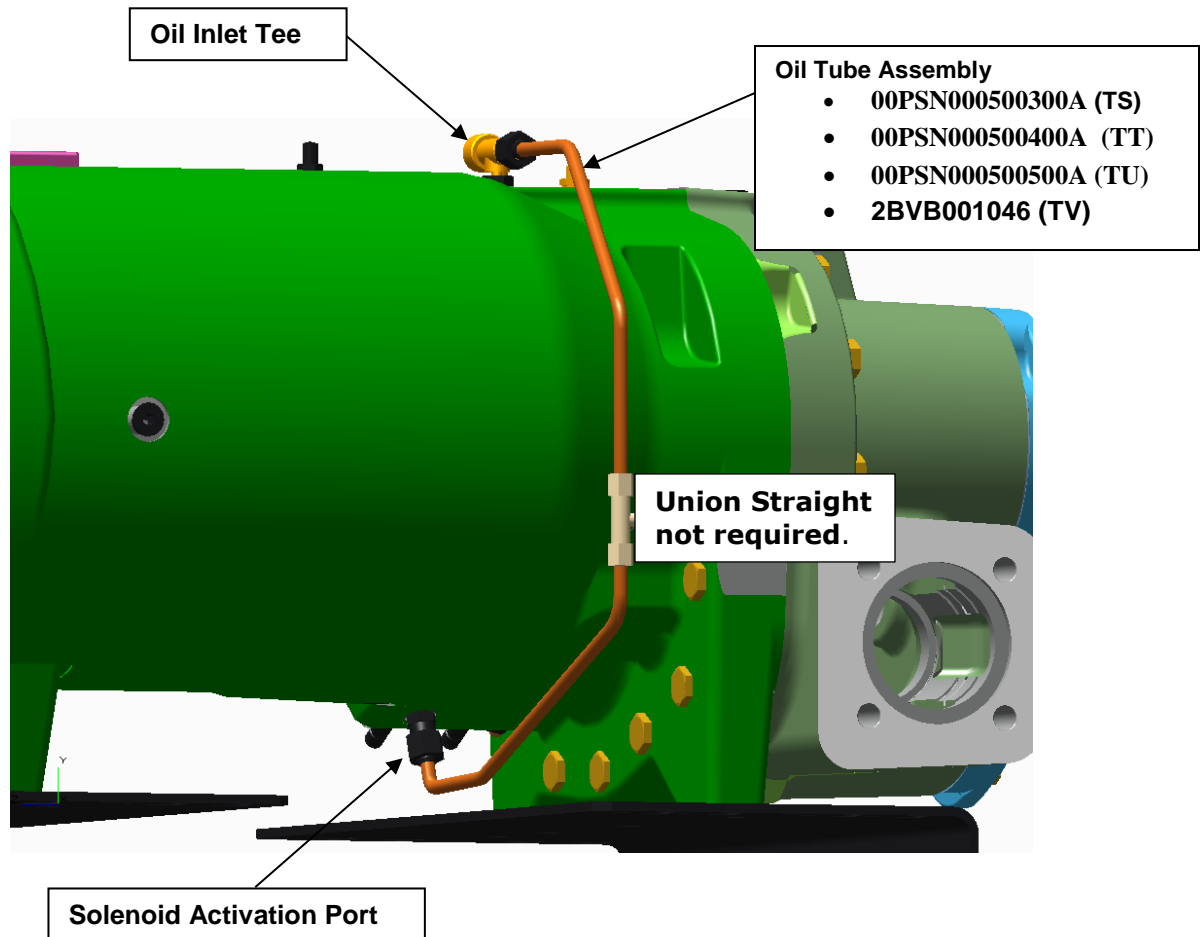

### **Installation Instructions:**

- **Follow recognized safety procedures and practices.**
- Do not remove any compressor fittings until factory-supplied holding charge has been relieved.
- Verify the content of the kit is complete and parts are clean and free from damage.
- Verify orings are in-place for all ORS connection points.
- It is recommended that all ORS oring fittings be lightly oiled with POE oil prior to installation.
- Follow all recommend torques to ensure proper and leak-free assembly.
- The Union Straight should be hand-tighten, then advance the nut 1/4 to1/2 turns.